

IMPORTED FROM ITALY
-SON OF A-
BARISTA
ARTISAN  COFFEE



Model:07M

EN

IMPORTED FROM ITALY
-SON OF A-
BARISTA
ARTISAN  COFFEE



INSTRUCTION BOOK

▲ Intended use:

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

It is prohibited to make any technical changes to the machine.

Do not use the machine for unauthorized purposes since this would create serious hazards!

The machine may not be used by children under 8 years of age or persons with physical, sensory or mental impairment, or lacking the necessary experience, unless supervised or after being instructed in the safe use of the machine and understanding the potential dangers.

Do not let children play with the machine. Keep the machine and its mains lead out of the reach of children under 8 years of age.

The necessary cleaning and maintenance must not be carried out by children if not under direct supervision.

▲ Installation site:

Place the coffee machine in a safe place, where nobody may overturn it or be injured by it.

Do not keep the machine at a temperature below 4°C (39,2°F) as freezing may damage it. Do not use the coffee machine outdoors.

Do not place the machine on very hot surfaces or close to flames.

▲ Power supply:

Connect the coffee machine to a suitable mains socket. The voltage must match the one on the appliance identification plate.


Problem encountered	Possible causes	Solution
The coffee is cold.	<ul style="list-style-type: none"> » Coffee pours out in drops, water circuit clogged. » The machine has limescale build-up. 	<ul style="list-style-type: none"> » Run the machine washing cycle. » Descale the machine. » If the problem remain please contact dealer
Dispensed coffee is insufficient or excessive.	<ul style="list-style-type: none"> » Incorrect dose programming. 	<ul style="list-style-type: none"> » Program the coffee dose properly. » If the problem remain please contact dealer
Coffee not supplied and steam coming out of the capsule compartment.	<ul style="list-style-type: none"> » The loading lever was not set to the brewing position. 	<ul style="list-style-type: none"> » Set the loading lever to the brewing position. » If the problem remain please contact dealer
Coffee pours out in drops.	<ul style="list-style-type: none"> » Faulty capsule. » Pump working improperly. » Spout/water circuit clogged. » The machine has limescale build-up. 	<ul style="list-style-type: none"> » Replace the capsule. » Check for abnormal noise of the machine. » Clean the coffee dispensing spout (see MAINTENANCE AND CLEANING). » Descale the machine. » If the problem remain please contact dealer
One of the two buttons is not working and the relevant LED is off	<ul style="list-style-type: none"> » Mechanical blocking 	<ul style="list-style-type: none"> » Try to power the machine off by disconnecting the power plug for 10 seconds then reconnect it. Power the machine on and check the correct operation of both buttons. » If the problem persists, the machine can continue to be used with the other button; in this case, the button working regularly will no longer have the automatic dosing but will be free dosing, and the user will decide when stopping the dose. » If the problem remain please contact dealer

Contact Customer Service for any problem or failure not included in the above list.


TECHNICAL SPECIFICATIONS

- Nominal Voltage - Power Rating - Power Supply: See label on the appliance
- Measurements: Height 235 mm Width 120 mm Depth 340 mm
- Weight: approx. 3.0 kg
- Water tank: 1.0 L - Removable type
- Housing materials: Thermoplastic
- Cable Length: 0,8 m (31.49 in)
- Thermo fuses
- Instantaneous aluminum boiler with temperature probe


Problem encountered	Possible causes	Solution
Water leaks at the rear side of the coffee machine.	<ul style="list-style-type: none"> » Tank not inserted correctly. » Tank damaged. 	<ul style="list-style-type: none"> » Insert the tank correctly. » Check for leaks in the tank keeping it separate from the machine . » If the problem remain please contact dealer
Water leaks at the front side of the coffee machine.	<ul style="list-style-type: none"> » Spent capsule drawer not inserted correctly. » Spent capsule drawer filled. » Capsule stuck. » Capsule not compatible. 	<ul style="list-style-type: none"> » Insert the spent capsule drawer correctly. » Empty the spent capsule drawer and the drip tray. » Lift and lower the capsule loading lever. If this is not enough, disconnect the machine from power mains and operate manually to remove the capsule from the duct. » Use right capsules or compatibles. » If the problem remain please contact dealer
The loading lever does not reach the supply position or requires an excessive closing effort.	<ul style="list-style-type: none"> » Spent capsule drawer filled. » Capsule fitted incorrectly. 	<ul style="list-style-type: none"> » Empty the spent capsule drawer. » Repeat the sequence, lever in the off position, lever in the brewing position; if this is not enough, operate manually to remove the capsule from the duct with the machine disconnected from power mains.
Red flashing lights.	<ul style="list-style-type: none"> » Machine broken. 	<ul style="list-style-type: none"> » Contact Lavazza Customer Service.
Pilot lights ON with white light and blinking fast.	<ul style="list-style-type: none"> » Spent capsule drawer filled. 	<ul style="list-style-type: none"> » Empty the spent capsule drawer and press one of the power on/supply buttons to reset the machine.
The coffee flows out too fast and no creamy froth forms on the surface.	<ul style="list-style-type: none"> » Capsule not compatible. » Capsule already used. 	<ul style="list-style-type: none"> » Use right capsules or compatibles. » Bring the lever back to rest position and load a new capsule. » If the problem remain please contact dealer

 Power supply cable:

Do not operate the coffee machine if the power cord is damaged. Should the power cord be damaged, have it replaced by the manufacturer or the relevant service centre, in order to prevent any risk. The power cord should not be placed on corners, on sharp edges or hot objects. Do not carry or pull the coffee machine holding it by the power cord. Do not remove the plug by pulling the power cord, do not touch it with wet hands. Power cord should not hang loose from tables or shelves.

 Danger of electrocution:

Live parts should never come into touch with water. Do not immerse the machine in water.

 Protect children under 8 years of age:


Prevent children from playing with the machine. Children are not aware of the risks related to electric household appliances. Do not leave the machine-packaging materials within the reach of children.

 Danger of burns:

Do not touch the hot parts (cartridge holder group) of the machine immediately after use. While dispensing the drink, pay attention to any possible splashes of hot liquid.

 Cleaning:

Before cleaning, unplug the machine and let it cool down. Do not immerse the machine in water! It is strictly forbidden to tamper with the internal parts of the machine. Change the water in the tank if not used for 3 days. To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

 Storing the machine:

If the machine remains inactive for a long time, unplug it and store it in a dry place out of reach of children. Keep it protected from dust and dirt.

✕ Servicing / Maintenance:

In case of failure, problems or a suspected fault resulting from falling of the machine, immediately unplug the machine. Do not attempt to operate a faulty machine. Servicing and repairs can only be performed by Authorized Service Centres. All liability for damages resulting from work not carried out by professionals is declined.

☒ Water tank:

Fill the tank only with fresh, non-sparkling, drinking water. Do not operate the machine if the water is not at least above the minimum level indicated on the tank.

☒ Capsule compartment

This machine can only be used with compatible capsules; do not put your fingers or any other object in the capsule compartment. The capsules can be used only once.

⌘ Machine disposal at the end of its operational life

INFORMATION FOR THE USER: the symbol of the crossed-out wheeled bin on the appliance or its packaging indicates that the product must be disposed of separately from other waste at the end of its operational life.

The user must therefore take the appliance to be disposed of to an appropriate separate collection centre for electrical and electronic equipment.

Appropriate separate collection for the dismantled appliance being subsequently sent out for recycling, treatment and for environmentally friendly disposal, contribute to the prevention of possible negative effects on the environment and on human health, and encourage recycling of the materials the appliance is made of.

Specific administrative sanctions provided for by current regulations will be applied for illicit disposal of the product by the user.

Problem encountered	Possible causes	Solution
Machine does not turn on. Power light(s) are off after having pressed the switch-on/ supply buttons.	<ul style="list-style-type: none"> » Machine is not connected to the power source. » The machine is connect to power strip not working. » Power supply not present. 	<ul style="list-style-type: none"> » Connected the machine to the power source. » Connected the machine directly to the power source. » Connect another device to check the power supply. » If the problem remain please contact dealer
The machine requires a lot of time to heat up.	<ul style="list-style-type: none"> » Machine storage at low temperatures (e.g.: cellar/garage). » The machine has limescale build-up. 	<ul style="list-style-type: none"> » Store the coffee machine in a proper environment and run 2 supplies without capsules. » Descale the machine. » If the problem remain please contact dealer
The machine is very noisy.	<ul style="list-style-type: none"> » Machine not is on a flat and stable surface. » Power supply cable incorrectly positioned. » Movable parts not fitted properly. » No water in the tank. » Capsule not present. 	<ul style="list-style-type: none"> » Check the surface. » Check the correct position of the cable into the base of the machine. » Fit the movable parts properly. » Top up the tank with fresh drinking water. » Insert right capsule or compatible. » If the problem remain please contact dealer
No supply.	<ul style="list-style-type: none"> » Electrical failure: buttons not working. » No water in the tank. » Tank not inserted correctly. » Power-on failed. 	<ul style="list-style-type: none"> » Press one of the buttons and check the operation of the pilot light (ON with white blinking light) and the machine power-on. » Top up the tank with fresh drinking water. » Insert the tank correctly. » Repeat the coffee machine power-on procedure. » If the problem remain please contact dealer

DESCALING

Limescale normally builds up with extended use of the appliance; the machine needs descaling every 3-4 months and/or whenever a reduction in water flow is noticed.

In the event of any operational conflict, this use and maintenance manual shall prevail on any indication specified on accessories and/or components sold separately.

For descaling can be used a descaling product for coffee machines of non-toxic and/or harmful type, commercially available.

Do not drink the descaling solution and products dispensed until the completion of the cycle. Never use vinegar as a descaling solution.

1 Remove and empty the water tank

2 Refill the tank with a descaling solution and water as specified on the package of the descaling product. Refit the tank.

3 Power the machine ON and place a suitable container under the spout.

4 Press one of the switch-on/ supply buttons, and then supply two cups (approximately 150 ml each) of water.

5 Allow the descaling solution to work for about 15-20 minute.


6 Switch-on the machine pressing one of the switch-on/ supply buttons, then proceed as described in steps and.

7 Repeat the steps described in point the water tank is completely empty. until

8 Remove the tank and rinse it with fresh drinking water. Fill it completely.

9 Switch the machine on by pressing one of the switch- on/supply buttons. Place a suitable container under the dispenser. Press one of the switch-on/supply buttons, then supply the full content of the tank.

10 When the water is finished, refill the tank and repeat the steps described in point. When finished, the 05 end of the descaling cycle is completed.

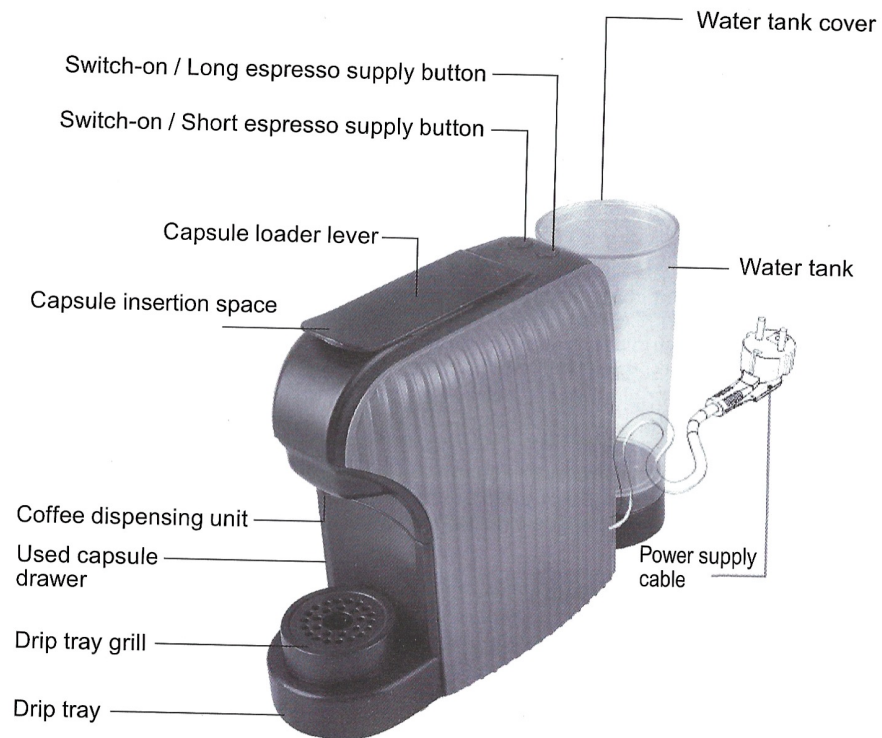



- ⚠ No liability is held for damage caused by:
- incorrect use not in accordance with the intended purposes;
 - repairs not carried out by authorized service centres;
 - tampering with the power supply cable;
 - tampering with any parts of the machine;
 - the use of non-original spare parts and accessories;
 - failure to descale;
 - storage at temperatures below 4°C (39,2°F);
 - use in places with temperature below 10°C (50°F) or above 40°C (104°F);
 - use in places with relative humidity above 95%;
 - use of capsules others than indicated. In these cases, the warranty is not valid.

STARTING THE MACHINE

- ⚠ Place the coffee machine on a flat and stable surface, far from water and heat sources. Do not connect the machine to the mains supply. Machine damages due to non-observance of these indications are not covered by warranty.
- 1 Lift and remove the cover, then the water tank itself.
 - 2 Rinse off the tank.
 - 3 Fill the water tank up to the MAX level indicated, using only fresh drinking water. Fit the tank back into place, then close by using the cover.
- ⚠ Hot water and other liquids can damage the tank and the machine. Do not operate the machine without water: make sure that there is enough water in the tank.

- ⚠ Never use solvents, alcohol or other aggressive substances or ovens for drying the coffee machine components. Wash machine components (electric components excluded) with cold/lukewarm water and non-abrasive clothes/sponges. All removable components can be cleaned by using a dishwasher. Do not leave water in the tank and water circuit for more than 3 days. If this is the case, drain the tank and circuit, rinse it and refill it with fresh water, then carry out a delivery without capsule before making any coffee or other beverage.

COFFEE DISPENSER CLEANING

To clean the dispenser, perform a weekly **COFFEE BREWING** procedure without inserting the capsule.

CLEANING THE CAPSULE COLLECTING DRAWER AND THE DROP COLLECTING

- i The used capsule collecting drawer and the drop collecting drawer should be emptied and cleaned after making coffee 4/5 times or every two/three days.



- 1 Take off the drip tray and remove the drip tray grill.



- 2 Remove and empty the used capsule collecting drawer. Clean and dry all parts before putting them back.
- i Regularly verify that the used capsule collecting drawer and the drop collecting drawer will not be full, to avoid machine malfunctions and damage.

PROGRAMMING THE MACHINE

COFFEE DOSE PROGRAMMING

i Measures are always programmed using the same button; any other buttons are ignored. The programmed amount of brewed coffee can be changed by repeating the programming.

- 1** Lift the capsule loading lever until it locks into position to open the capsule fitting compartment.
- 2** Put a capsule into the capsule fitting compartment.




- 3** Lower the capsule loading lever to close the capsule fitting compartment.
- 4** Press and hold one of the two coffee delivery buttons for at least 3 seconds, then releasing the button. The selected key will flash and the coffee machine will enter the programming mode.

- 5** Once the desired amount of coffee has been obtained, press button again to stop supply.

- i** Programming Scope:
 Short espresso button: 15 seconds to 35 seconds
 Long espresso button: 35 seconds to 60 seconds
- i** If the programmed measure exceeds the maximum the machine will automatically stop delivery, the delivery button will blink and the last programmed measure will be saved in the memory. If there is a power failure during programming, the last programmed value remains in the memory. If during a dose programming, water lack is indicated, the machine stops the supply and the dose being programmed won't be saved. Once filled the water tank, repeat the dose programming procedure.



MACHINE SETTING

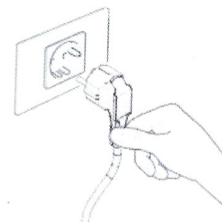

- 4** Fit the supply plug into the power outlet.
- 5** Press one of the switch-on/supply buttons to switch the machine on.

- 6** The coffee machine starts the heating cycle. The switch on/supply buttons will start blinking to a light white.
- 7** The machine will be ready for use when the switch-on/supply buttons light up to a steady white light.
- 8** At first power-on, supply at least 0.5 litres of water without capsule placing a container under the coffee spout.

STAND-BY FUNCTION

- i** To ensure the energy conservation the machine automatically passes to the stand-by mode after 9 minutes of not being used. The machine can be set to the stand-by mode manually, first of the 9 minutes' time, by keeping both buttons pressed down for at 1 seconds. This mode is indicated by the switching off of the buttons. The machine can be reactivated by pressing the buttons again.



PREPARING THE COFFEE

COFFEE DISPENSING

- i** Make sure that the switch-on/supply buttons lights up to a steady white light.
- ⚠** Never put fingers or objects in the pod-holder. Only compatible capsules must be introduced in the pod-holder.
- ⚠** Single-dose capsules are prepared to dispense one coffee/product. DO NOT use the capsules more than once. Inserting two or more capsules can cause the machine to malfunction.
- i** To always have a coffee at the perfect temperature, it is recommended to preheat the cup with hot water. Position the cup under the dispensing spout without inserting the capsule. Press one of the switch-on/supply buttons to supply hot water enough to pre-heat the cup.



- 1** Place the cup under the coffee dispenser for a classic espresso



- 2** Remove the drip tray to use cups of different sizes for a long coffee.

- i** If power supply is interrupted during the coffee supply cycle, restore power supply and restart the coffee supply procedure.
- i** If during the supply cycle, water lacks in the tank, please press button to stop machine. then proceed as follows
 - Fill the water tank up to the MAX level indicated.
 - Press the power-on/supply button previously selected. The button will start flashing and the coffee supply procedure will restart.
- i** After about 15 supplies capsules, please empty the capsules drawer. Now the machine is ready for a new supply.

PREPARING THE COFFEE

- 3** Lift the capsule loading lever until it locks into position to open the capsule fitting compartment.



- 4** Put a capsule into the pod fitting compartment.



- 5** Lower the capsule loading lever to close the capsule fitting compartment.



- 6** Press the short espresso (30 cc) or long espresso button (60 cc) to start delivery. The machine will stop delivery automatically when the programmed measure is reached.



- i** The switch-on/supply button will light up to a blinking white light when the product is being supplied.
- ⚠** To supply the product again, wait for the switch-on/supply button to light up to a steady white light.